# **Instruction Manual**

### 1. Safety Instructions

- To ensure sufficient convection cooling, always maintain a safety distance of ≥ 50mm from all ventilated surfaces while the device is in operation.
- The device is not recommended to be placed on low thermal conductive surface, for example, plastics.
- Note that the enclosure of the device can become very hot depending on the ambient temperature and load of the power supply. Do not touch the device while it is in operation or immediately after power is turned OFF. Risk of burning!
- Do not touch the terminals while power is being supplied. Risk of electric shock.
- Prevent any foreign metal, particles or conductors to enter the device through the openings during installation. It can cause: Electric shock; Safety Hazard; Fire; Product failure
- Warning: When connecting the device, secure Earth connection before connecting L and N. When disconnecting the device, remove L and N connections before removing the Earth connection.

### 2. Device Descriptions

Refer to Fig. 1.:

1 Input terminal block connector

2 Output terminal block connector

③ DC Voltage adjustment potentiometer

④ DC OK control LED (Green)

⑤ DC Fan

#### 3. Installation of the Device

The unit is protected with internal fuse (not replaceable) at L pin and it has been tested and approved on 20A (UL) and 16A (IEC) branch circuits without additional protection device. Refer to Fig. 2.:

(A) Mounting holes for power supply assembly onto the mounting surface. The power supply shall be mounted on minimum 4 mounting holes using M4 screw.

B Input / Output connector

© This surface belongs to customer's system or panel where the power supply is mounted.

Please refer the table below for the recommended AWG wire size and torque.

	AWG	Torque (Kgf.cm)
Input connector <sup>(1)</sup>	14-12	11.98
Output connector <sup>(2)</sup>	6-4	32.00

Refer to Fig. 3:

Use flexible cables. The insulation stripping length should not exceed 0.275" or 7mm.
 Use flexible cables with ring or fork terminals.

#### 4. Installation of Mounting Accessories

Refer to Fig. 4.:

- Only use M4 screw ≤ 6mm through the base mounting holes. This is to keep a safe distance between the screw and internal components.
- Recommended mounting torque for tightening: 4-8Kgf.cm.

#### 5. Input Voltage Derating Curve

- Output derating is required at 85-115Vac (Refer to Fig. 5).
- 6. Maximum 5000 Meters Operating Altitude





使用说明书			取扱説明書 PMC-12V600W1B□			
<ul> <li>1. 安全规范 <ul> <li>与通风表面保持至少 50mm 的安全距离,以确保对流冷却充分。</li> <li>本产品不适合摆放在低热导体,例如:塑胶。</li> <li>受环境温度及产品负载的影响,本机外壳温度会很高,因此在上电时或切断电源后短时间内不要触摸本机,以免烫伤。</li> <li>请勿在上电时触摸连接端子,以防电击危险。</li> <li>安装过程中,应避免金属元件或金属导体通过空隙或通风孔进入到产品内,否则会引起下列状况。 <ul> <li>电击;安全危害;火灾;产品异常</li> <li>警告:在连接产品电源供应时,产品必须先接地然后才接L和N。当要解开电源供应时,必须先把L和N解开然后才把接地解开。</li> </ul> </li> </ul></li></ul>			<ol> <li>安全上の注意         <ul> <li>電源装置を十分に冷却するため、運転中はすべての通気面の周囲に 50mm 以上のスペースを保って下さい。</li> <li>本装置を低熱伝導面(例:プラスチック)に設置することは避けて下さい。</li> <li>電源装置の周囲を囲うと、周囲温度や電源の負荷によって非常に熱くなることがありますので注意して下さい。電源装置の運転中やパワーをオフにした直後は、装置に触れないで下さい。やけどの恐れがあります。</li> <li>電源運転中はターミナルに触らないで下さい。感電の危険があります。</li> <li>装置を箱から出してから設置するまでの間、金属の異物や導電体が装置の中に入らないようにして下さい。こうした異物は、感電、火事、装置の故障を引き起こす危険があります。</li> <li>警告!電源装置の配線時、LとN をつなぐ前にアースにつなぐこと。装置をはずす際、アース接続をはずす前に、LとN の接続をはずすこと。</li> </ul> </li> </ol>			
<ol> <li>产品外观介绍 依据图一:</li> <li>① 输入连接端子</li> <li>② 输出连接端子</li> <li>③ 直流电压调节电位器</li> <li>④ 直流电控制 OK 指示灯</li> <li>⑤ 直流風扇</li> </ol>	(绿色)			<ol> <li>電源装置の各部名称</li> <li>図1参照:</li> <li>①入力端子台</li> <li>②出力端子台</li> <li>③出力微調整ボリューム</li> <li>④出力モニター用 LED 指え</li> <li>⑤冷却用 DC ファン</li> </ol>	示灯(グリーン色)	
<ul> <li>3. 产品固定方式 依据图二:</li> <li>④ 在把产品安装在固定表 定孔。</li> <li>⑤ 输入/输出连接端子。</li> <li>⑥ 此固定表面为客户系统:</li> </ul>		产品应该用 M4 螺丝锁入至2	ゆ四个固	<ul> <li>3. 電源装置の設置</li> <li>図2参照:</li> <li>④取付け穴を使用して取付さい。</li> <li>⑥入出力端子です。</li> <li>⑥この面は、電源装置を固</li> </ul>		場合、M4 ねじを使い、4 箇所以上をとめて下 いしはパネル面です。
• 请参阅以下表格,以供	建议的线材尺寸与扭矩。			• 推奨び線径及締め付けト	トルク(製品には添付し	ておりません)。
	AWG	扭矩 (Kgf.cm)			AWG	締め付けトルク (Kgf.cm)
输入连接端子(1)	14-12	11.98	1	入力端子台 <sup>(1)</sup>	14-12	11.98
输出连接端子 <sup>(2)</sup>	6-4	32.00		出力端子台 <sup>(2)</sup>	6-4	32.00
依据图三: (1) 可以使用柔性电线。剥线的长度不 (2) 使用柔性电线跟环形(R型)或者3	应该超过 0.275″ 或者 7㎜。 叉形(Y型)压接端子。		-	図 3 参照: (1) フレキシブルケーブルをご使用下さ (2) 丸形(R形)または先開形(Y形)の		
<ul> <li>4. 配件组合安装 依据图四:</li> <li>在把配件装上产品时,前为了确保螺丝和内部元位</li> <li>建议配件固定螺丝扭矩;</li> </ul>	件间有足够的绝缘距离。	M4 螺丝锁入产品底面的固定?	し。这是	<ul> <li>4. 設置の際の注意</li> <li>図4参照:</li> <li>外部機器への装着時は、 深さで固定して下さい。</li> <li>装着時の締め付けトルク</li> </ul>		『回路への安全距離を保つため 6mm を越えない いたします。

5. 入力電圧ディレーティングカーブ ・ 入力電圧によるディレーティング特性 (図5参照)。

6. 最大 5000 メートルの動作高度

### 5. 输入电压降额图表

REV. 01

• 输出电压在 85-115 Vac 之间时应降额(依据图五)。

## 6. 最高 5000 米的工作高度

www.DeltaPSU.com